

FENDER "BANDMASTER" SCHEMATIC MODEL 5E7

E E E

NOTICE

VOLTAGES READ TO GROUND
WITH ELECTRONIC VOLTMEETER
VALUES SHOWN ± OR - 20%

