



SWITCH POSITIONS

S1—SELECTOR	
1—AUX	2—TUNER
3—TAPE	4—PHONO
S2—TYPE	
A—45/45	B—VERTICAL/LATERAL
S3—FUNCTION	
1—OFF	2—L-R
3—R-L (FORWARD)	4—MONO (REVERSE)

NOTES

1—TO INCLUDE TAPE HEAD PREAMP, BREAK AT X'S AND INSERT PREAMP SHOWN IN FIG. 3. (SEE TEXT)

2—IF AUX INPUT IS TO BE USED FOR CERAMIC STEREO CARTRIDGE, BREAK AT X'S, ADD DOTTED CONNECTION. (SEE TEXT)

*MATCHED TO 1%
*LOW-NOISE DEPOSITED CARBON RESISTORS

