





## ALIGNMENT PROCEDURES

Apply volt-meter across the voice coil. The Volume control should be set to maximum. Output of signal generator should be kept low only enough to obtain output indication.

STEP	SIGNAL GENERATOR COUPLING	SIGNAL GENERATOR FREQUENCY	RADIO DIAL SETTING	ADJUST FOR MAXIMUM OUTPUT
------	---------------------------	----------------------------	--------------------	---------------------------

### IF ALIGNMENT

1	radiate signal through the loop coil, which connected with signal generator output cable	455 kc	lower end	IF transformer T 3 T 2 T 1
---	--	--------	-----------	-------------------------------------

### BROADCAST RF ALIGNMENT

2	radiate signal through the loop coil, which connected with signal generator output cable.	520 kc	lower end	Osc. coil
3		1650 kc	upper end	Osc. trimmer
4		Repeat steps 2 and 3.		
5		600 kc	600 kc	Ant. coil
6		1400 kc	1400 kc	Ant. trimmer
7		Repeat steps 5 and 6.		