



SWITCHES

- SW 1 a, b, c, d INPUT (1: Phono-2 2: Phono-1
e, f, g, h SELECTOR 3: Tuner 4: Aux)
- SW 2 a, b, c, d DUBBING (1: 1-2 2: Source 3: 2-1)
- SW 3 a, b MONITOR (1: Tape-1 2: Source 3: Tape-2)
- SW 4 a, b, c MODE (1: Reverse 2: Stereo 3: Mono)

- SW 5 a, b ATTENUATE (1: 20dB 2: Normal 3: Signal off)
- SW 6 a, b, c, d FILTER (1: Subsonic 2: Deaf 3: Low cut)
- SW 7 a, b TREBLE CONTROL
- SW 8 a, b, c, d BASS CONTROL
- SW 9 a, b TONE DEFEAT (1: Deaf 2: Tone on)

VOLUMES

- VR 1 a, b BALANCE CONTROL
- VR 2 a, b VOLUME CONTROL

LUX A3040