


- S₁ FUNCTION**
- (1. AUXILIARY 2. PHONO
 - 3. TUNER 4. TAPE RECORDER)
 - S₂ MONITOR**
 - (1. OUT 2. IN)
 - S₃ MODE**
 - (1. STEREO 2. MONO L+R)
 - S₄ TREBLE**
 - (1. MILD 2. INTENSE)
 - S₅ BASS**
 - (1. MILD 2. INTENSE)
 - S₆ ATTENUATOR**
 - (1. NORMAL 2. ATTENUATOR)
 - S₇ SPEAKER SYSTEM** (1. A-SPEAKER 2. B-SPEAKER)
 - S₈ POWER** ON --- OFF

- VR1 BALANCE CONTROL**
VR2 VOLUME CONTROL
VR3, VR4 TREBLE CONTROL
VR5, VR6 BASS CONTROL
- Q1 ~ Q8 2SC693GU**
Q9, Q10 2SC694G
Q11, Q12 2SC734Y or 2SC815L
Q13, Q14 2SA545
Q15, Q16 2SC853
Q17 ~ Q20 2SD92

UNLESS OTHERWISE SPECIFIED,
 ALL RESISTORS ARE IN OHM, 1/8 WATT ±10%,
 K = X 10³ M = X 10⁶
 ALL CAPACITORS ARE IN MFD,
 DC VOLTAGES MEASURED TO GROUND WITH ZERO SIGNAL.

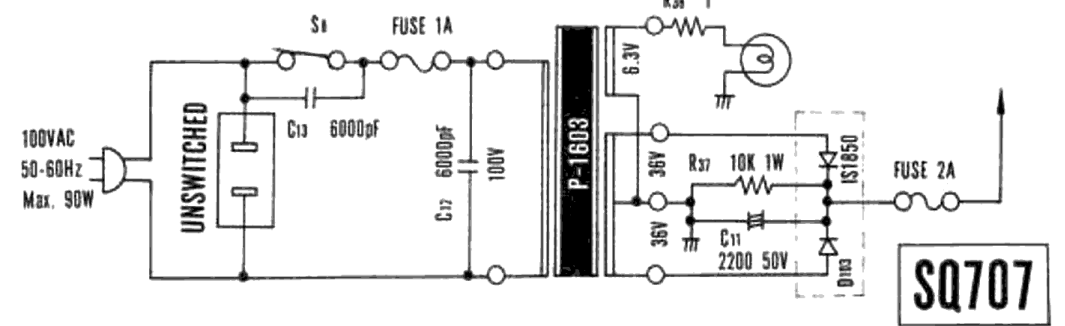

SQ707