


Technics TAPE DECK MODEL RS-612US SCHEMATIC DIAGRAM

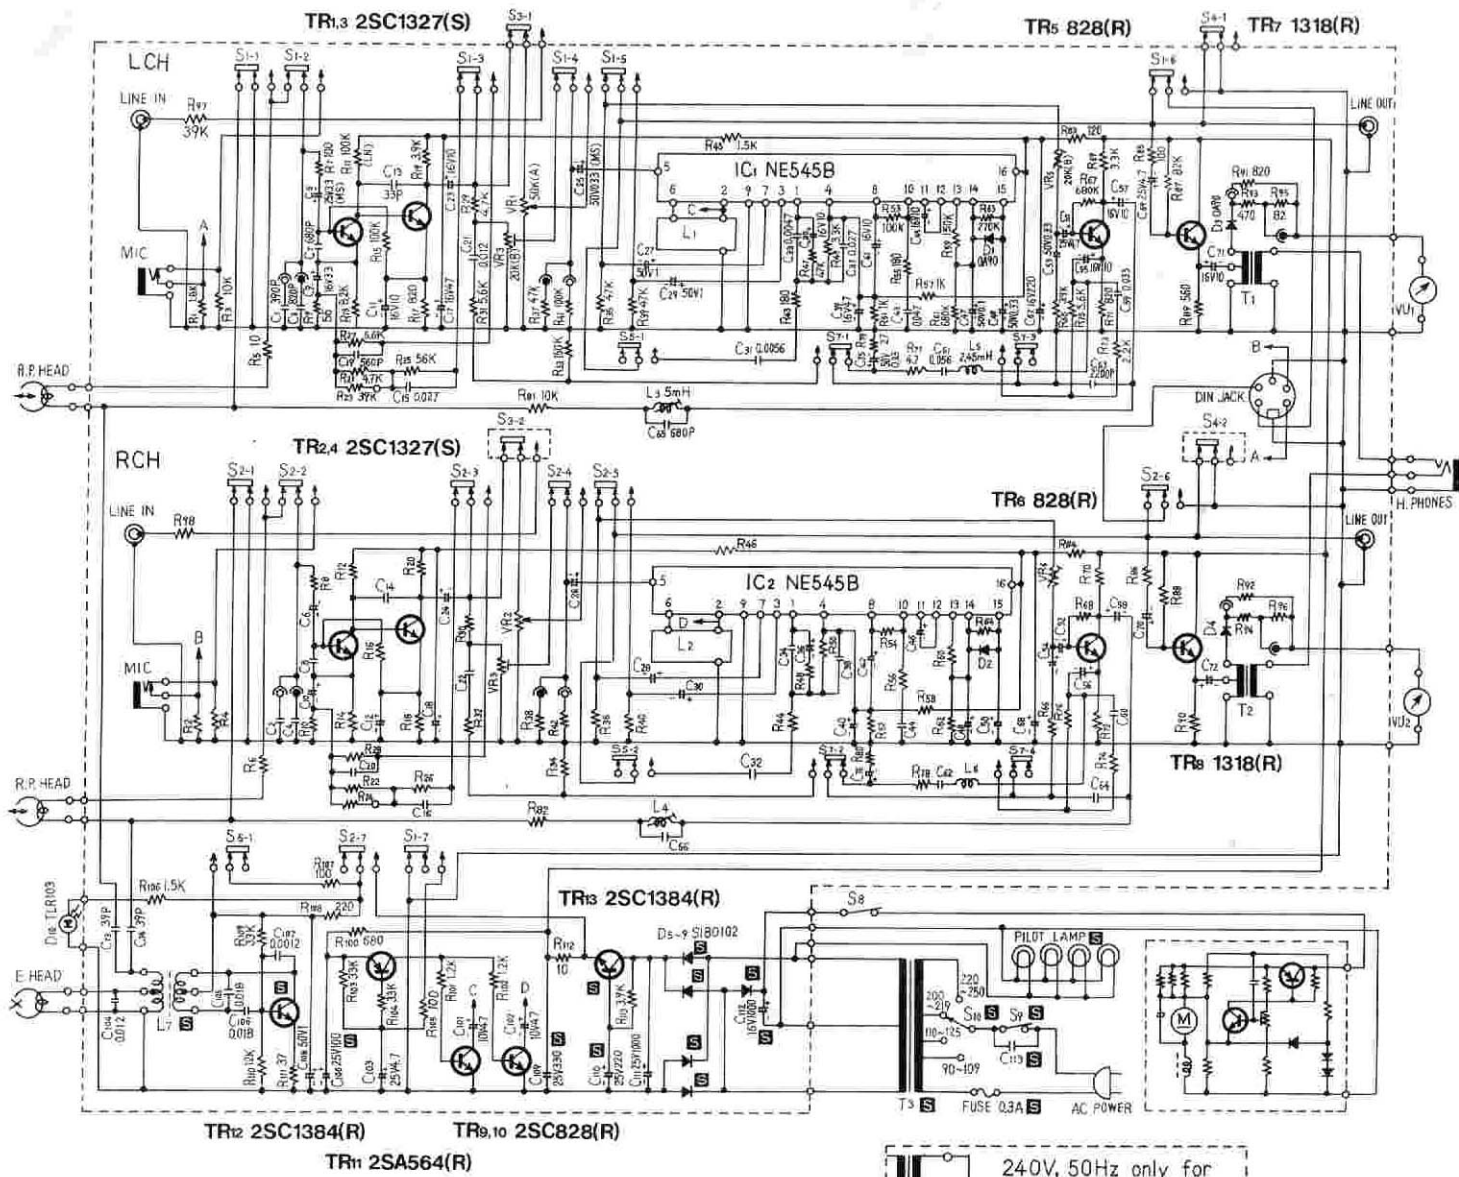

- NOTE:**
- S1-1~S1-7
 - S2-1~S2-7... B/F SELECT SW (SHOWN IN PLAYBACK POSITION)
 - S3-1, S3-2... INPUT SELECT SW (SHOWN IN MIC POSITION)
 - S4-1, S4-2... MUTING SW (OFF AT PLAY & RECORD POSITION)
 - S5-1, S5-2... DOLBY γ OUT SW (SHOWN IN OUT POSITION)
 - S6-1... BIAS SELECT SW (SHOWN IN LOW POSITION)
 - S7-1~S7-4... EQ SELECT SW (SHOWN IN 120 μ S POSITION)
 - S8... MOTOR ϕ OFF SW (ON AT PLAY, REC, FF & REW POSITION)
 - S9... AC POWER ϕ OFF SW (SHOWN IN ON POSITION)
 - S10... VOLTAGE SELECT SW
 - VR1, VR2... RECORD IN PUT LEVEL CONTROL
 - VR3, VR4... PLAYBACK LEVEL ADJ.
 - VR5, VR6... RECORD LEVEL ADJ.
 - L3, L4... RECORD BIAS ADJ.

Ⓜ indicates that only parts specified by manufacturer be used for replacement in critical circuits.
 * This schematic diagram is subject to change, to accommodate improvements in design.

