


IC601
RSN310R36A-P
POWER AMP HIC

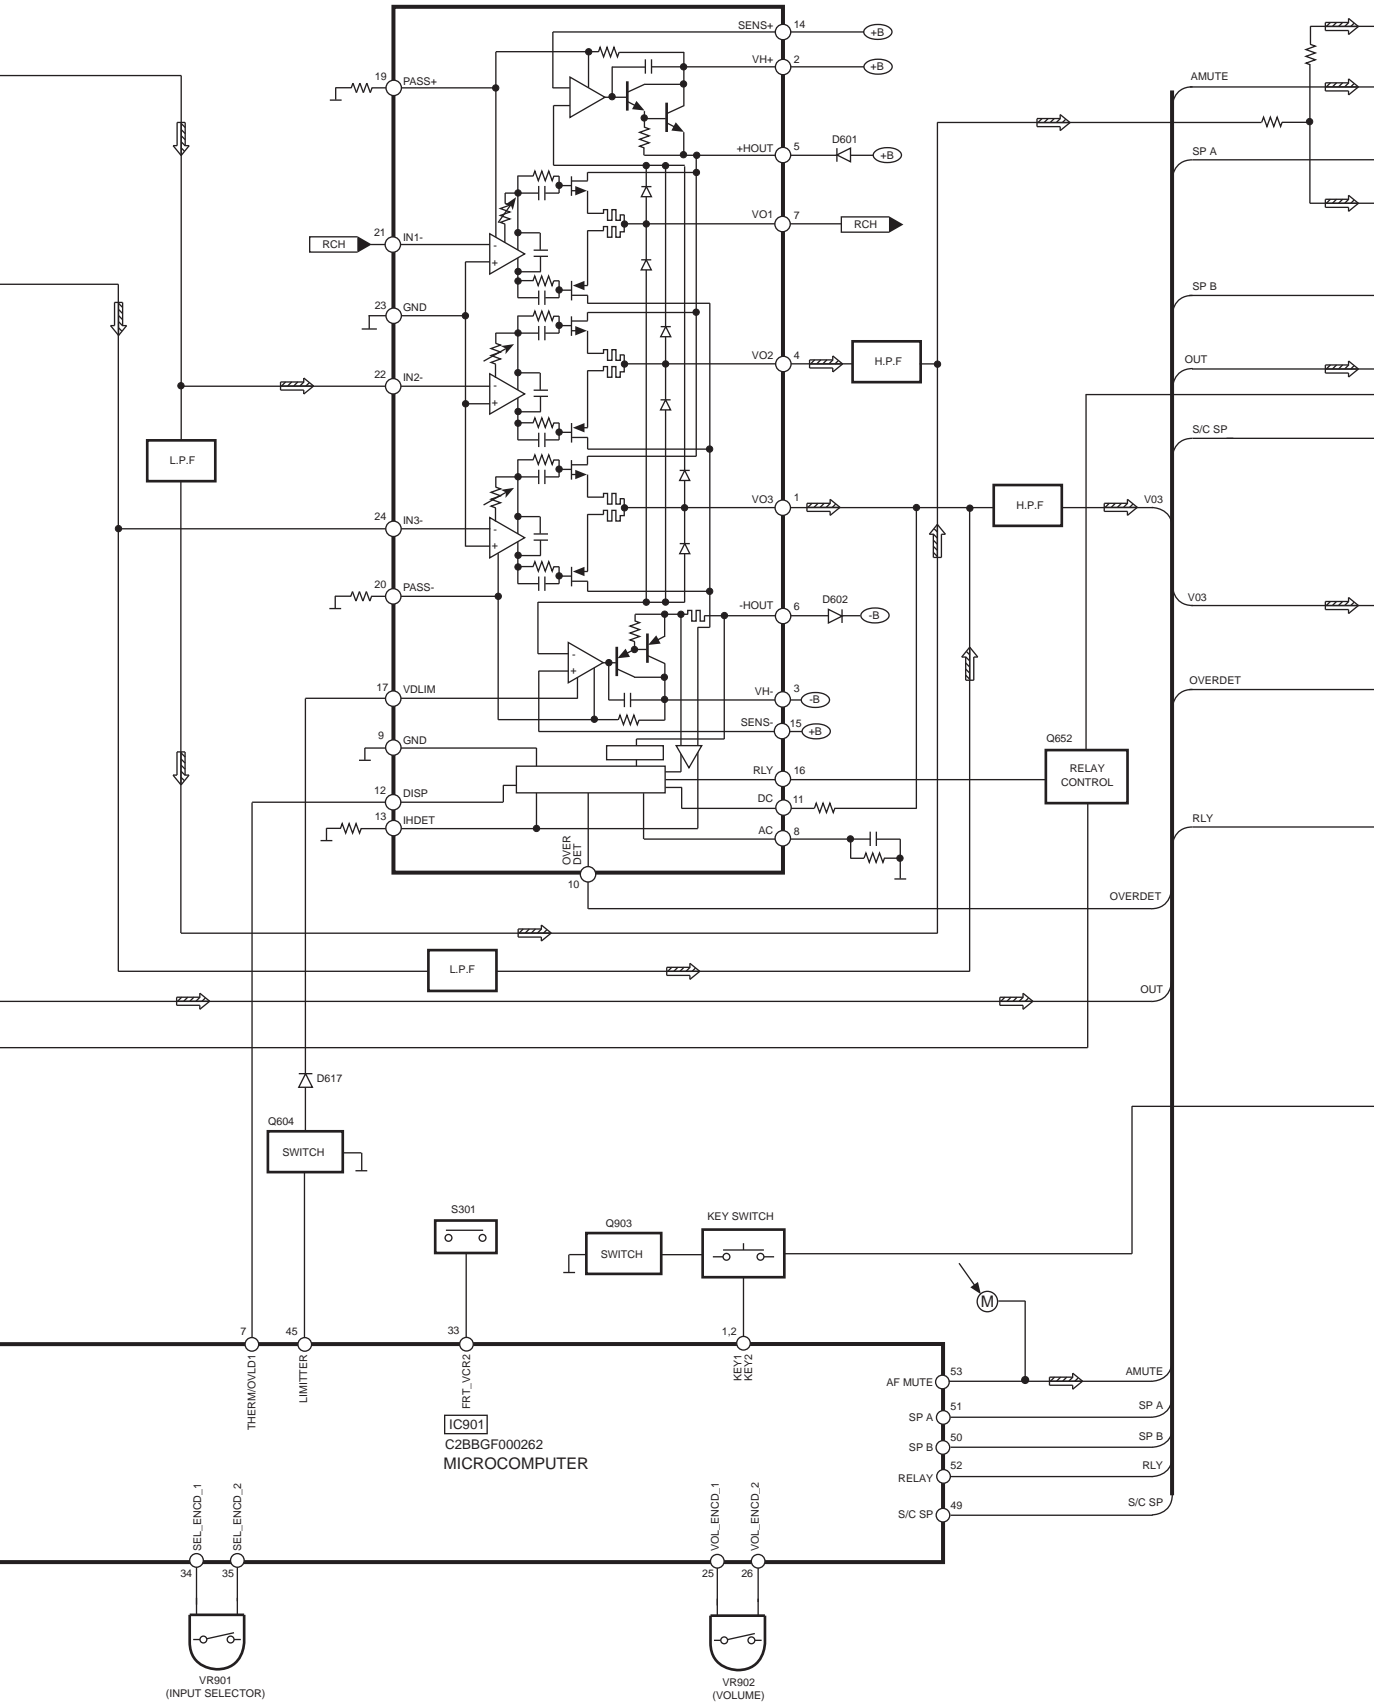

L.P.F

L.P.F

H.P.F

H.P.F

Q604
SWITCH

S301

Q903
SWITCH

KEY SWITCH

VR901
(INPUT SELECTOR)

VR902
(VOLUME)

IC901
C2BBGF000262
MICROCOMPUTER

Q652
RELAY CONTROL

AMUTE

SP A

SP B

OUT

S/C SP

VO3

OVERDET

RLY

OVERDET

OUT

AF MUTE

SP A

SP B

RELAY

S/C SP



AMUTE

SP A


SP B

RLY


S/C SP

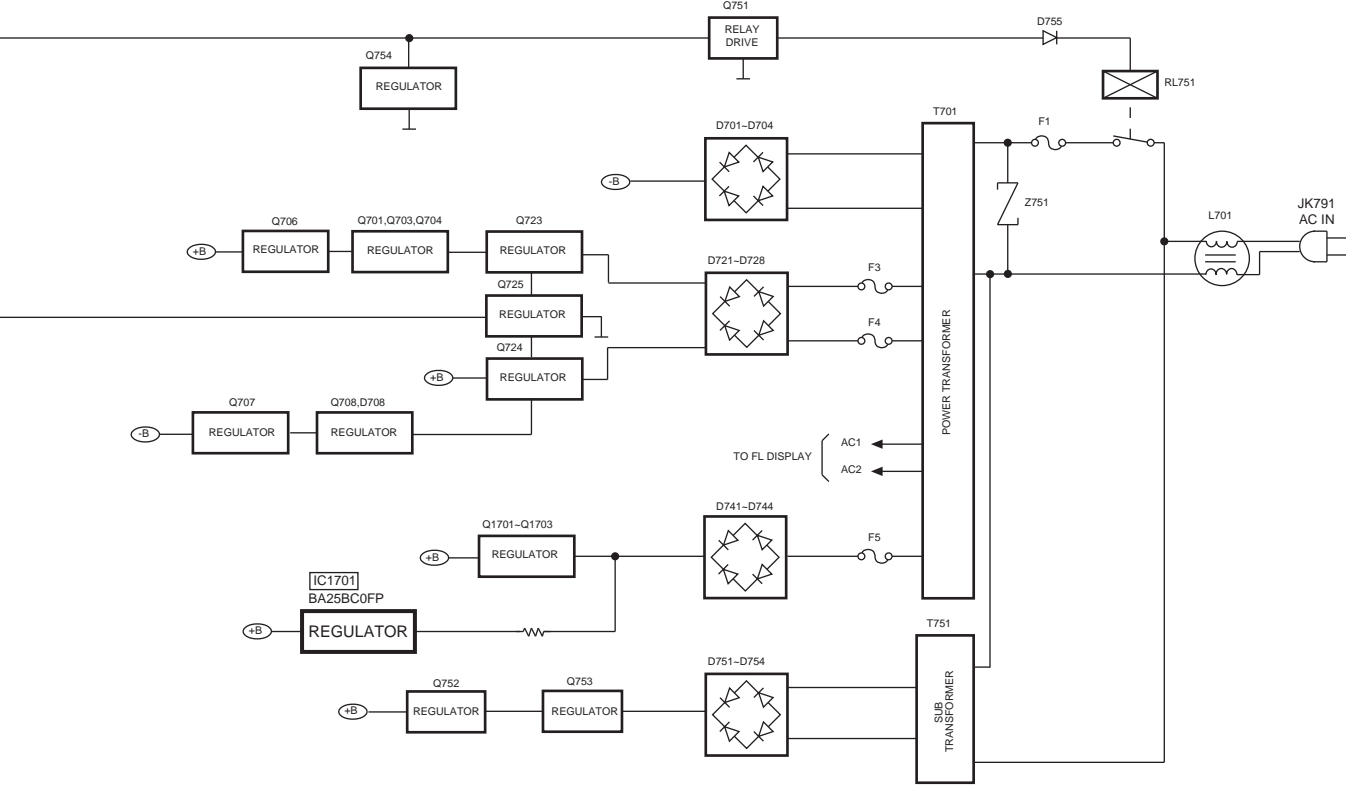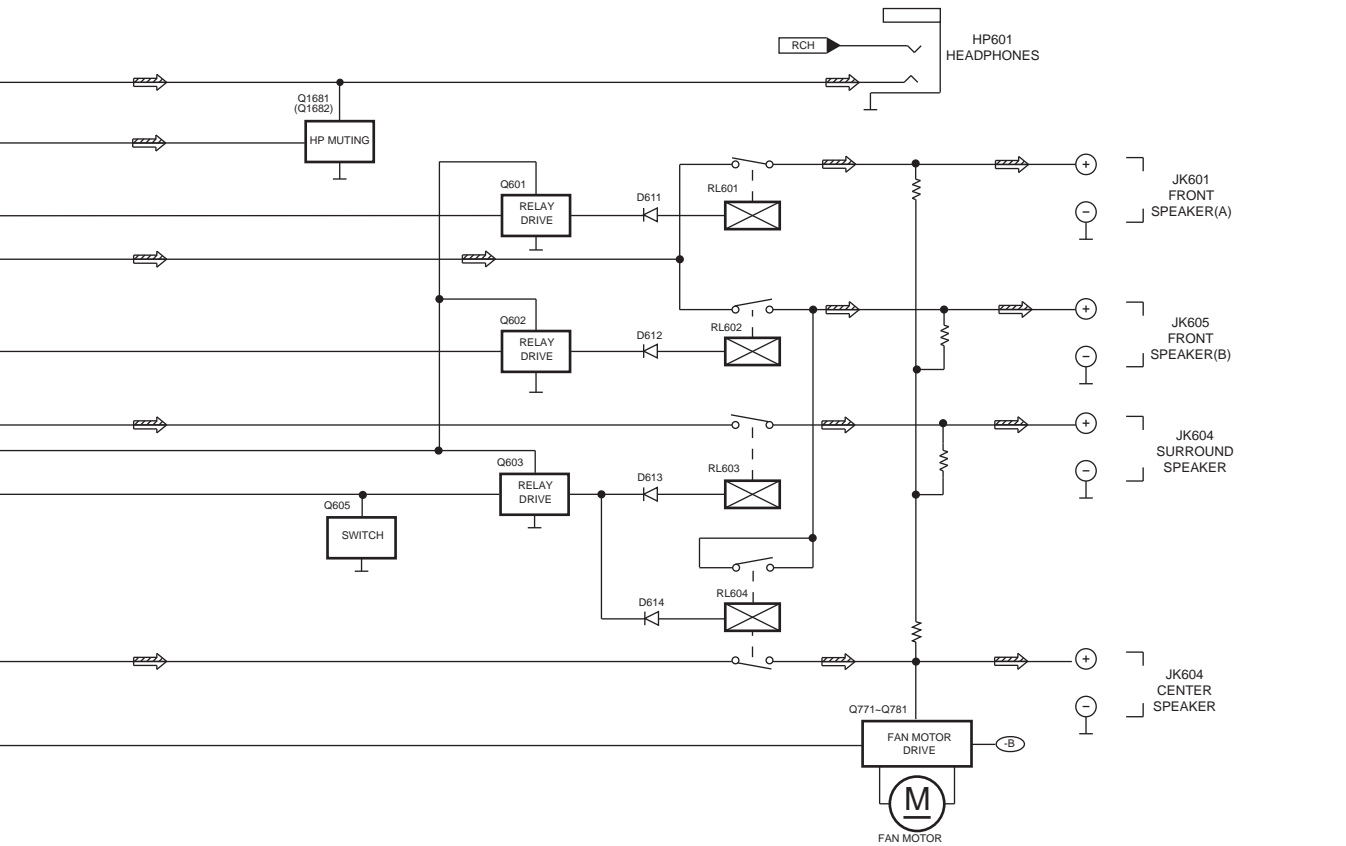


SIGNAL LINES

 


C2BBGF000262 (80p)
CS49326-CLR (40p)
CS4226-KQG (44p)

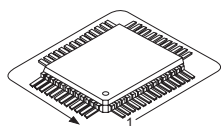


RSN313H25-P

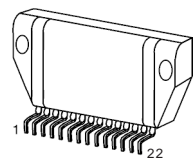


NJM2279MTE1 (14p)

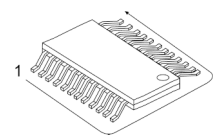


BA25BC0FP

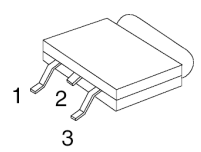


AN6558F
NJM2115MTE1
NJM4580DD
NJM4580MTE1

 


SNAHC1U04DBV

 


NJM2060MTE1

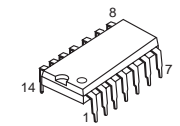


TC9163AN

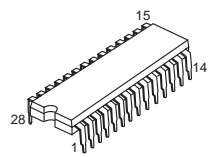


RSN310R36A -P

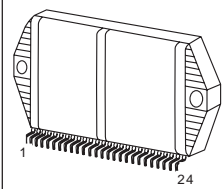


TC9162AF (28p)
TC9482F (28p)

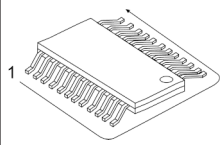


SN74LV244APW (20p)
SN74HCT244PW (20p)
SN74HCU04APW (14p)

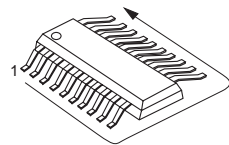


LC72720N (24p)

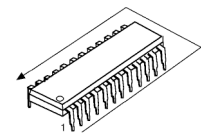


2SA1534AQRTA
2SC3940AQSTA

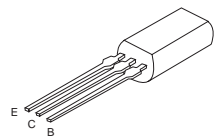


2SD1915FTA

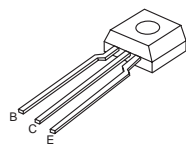


2SK2880CTA

 


2SB1548PQAU
2SD2374PQAU

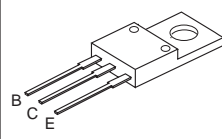


2SB621AQSTA
2SD592AQSTA

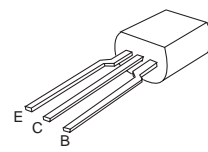


DTA114YETL

 


2SD2137PQTA

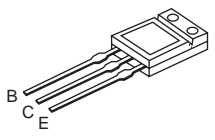


2SA933SQRSTA
2SC1740SSTA
2SC1740SQSTA
RVTDTA114EST
RVTDTA114YST
RVTDTA143XST
RVTDTA143ZST
RVTDTA114EST
RVTDTA113ZST

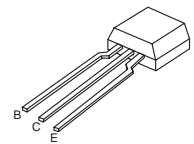


1SS355TE17
UDZSTE176R2B
UDZSTE175R6B

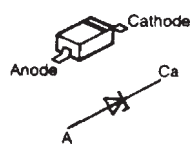

1N5402BM21
RK306LFU1

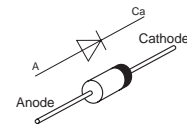


SLR325MCT31
SLR325YCT31
SLR325VCT31

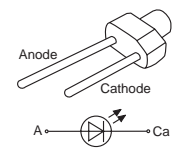


MTZJ16CTA
MTZJ33DTA
MTZJ3R9ATA
MTZJ5R6BTA
MTZJ6R2BTA
MTZJ6R8BTA
MTZJ7R5CTA
MTZJ3R3ATA

MTZJ8R2CTA
1SS291TA
RVD1SS133TA
1SR35400V
RB721Q40T77

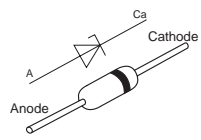


MA167ATA

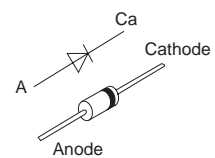

A B C D E F G

1
2
3
4
5
6
7
8
9

C MAIN P.C.B. (REP3109C-M...E/EG) (REP3109D-M...EB)

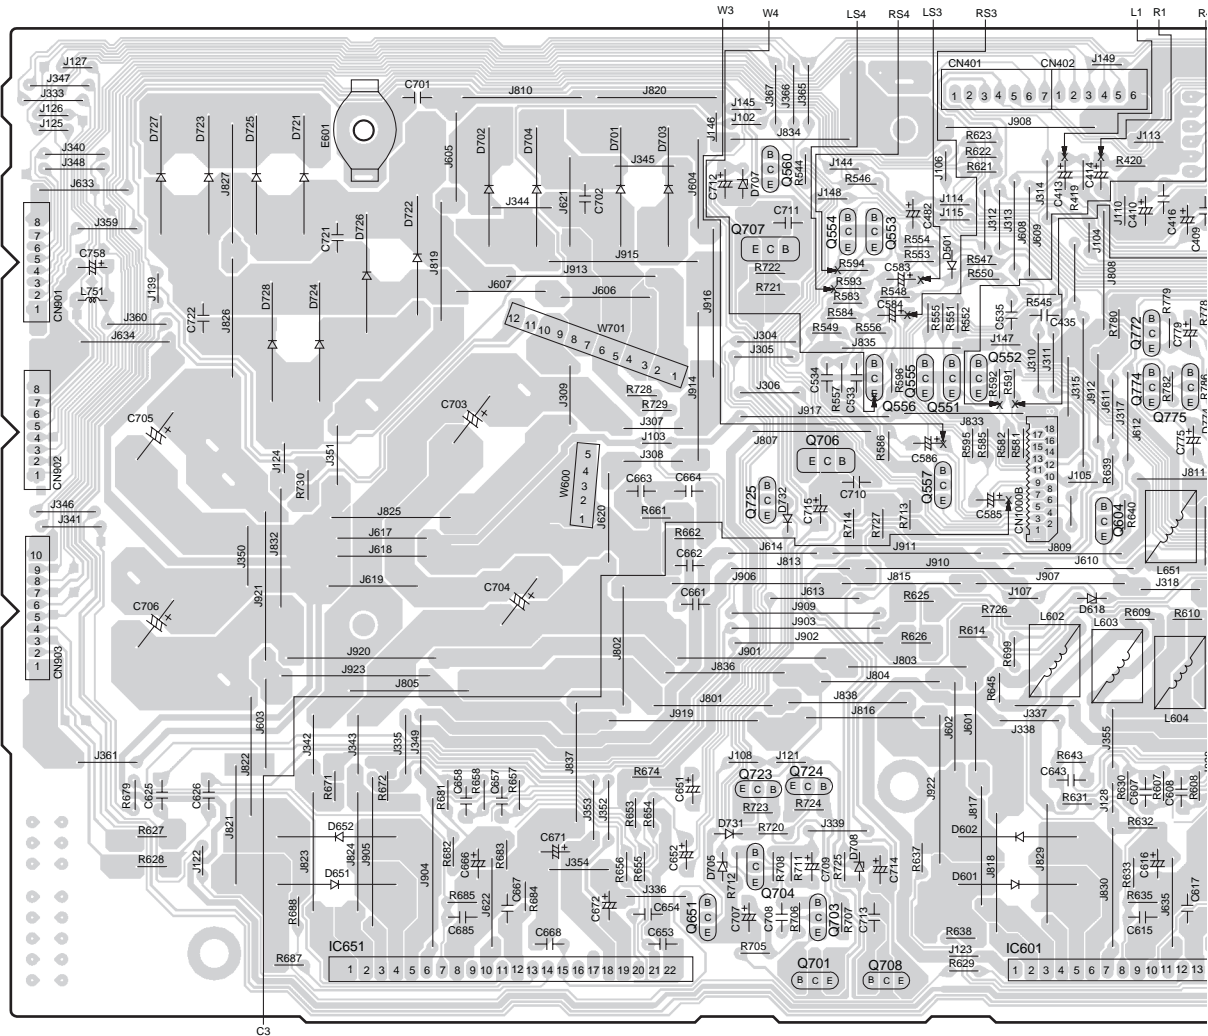

G

H


I

J

K

L

M

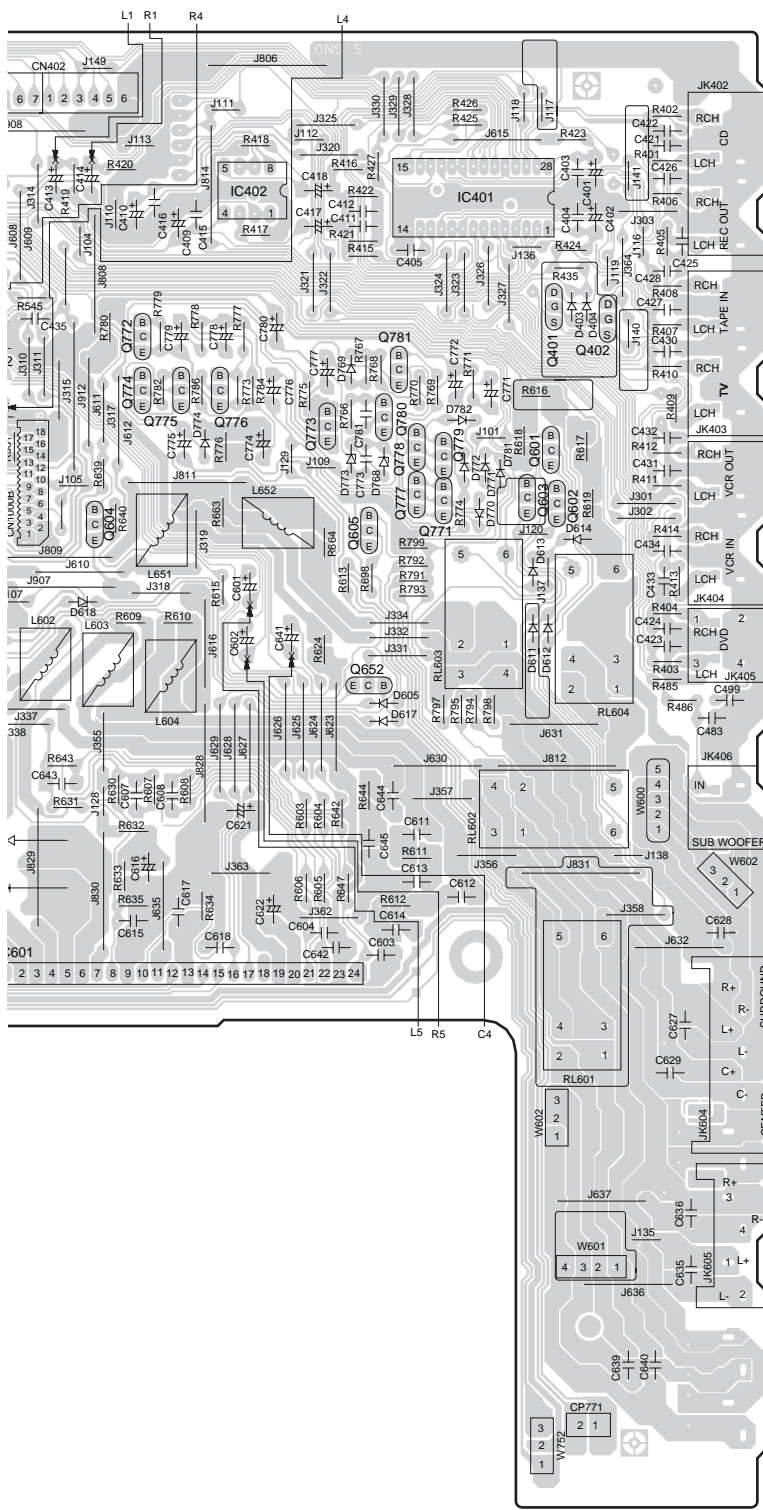

CD

TAPE

TV

VCR

DVD

SUB WOOFER


SURROUND SPEAKERS

CENTER SPEAKERS

FRONT SPEAKERS

A B C D E F G

B PANEL P.C.B. (REP3104E-S)

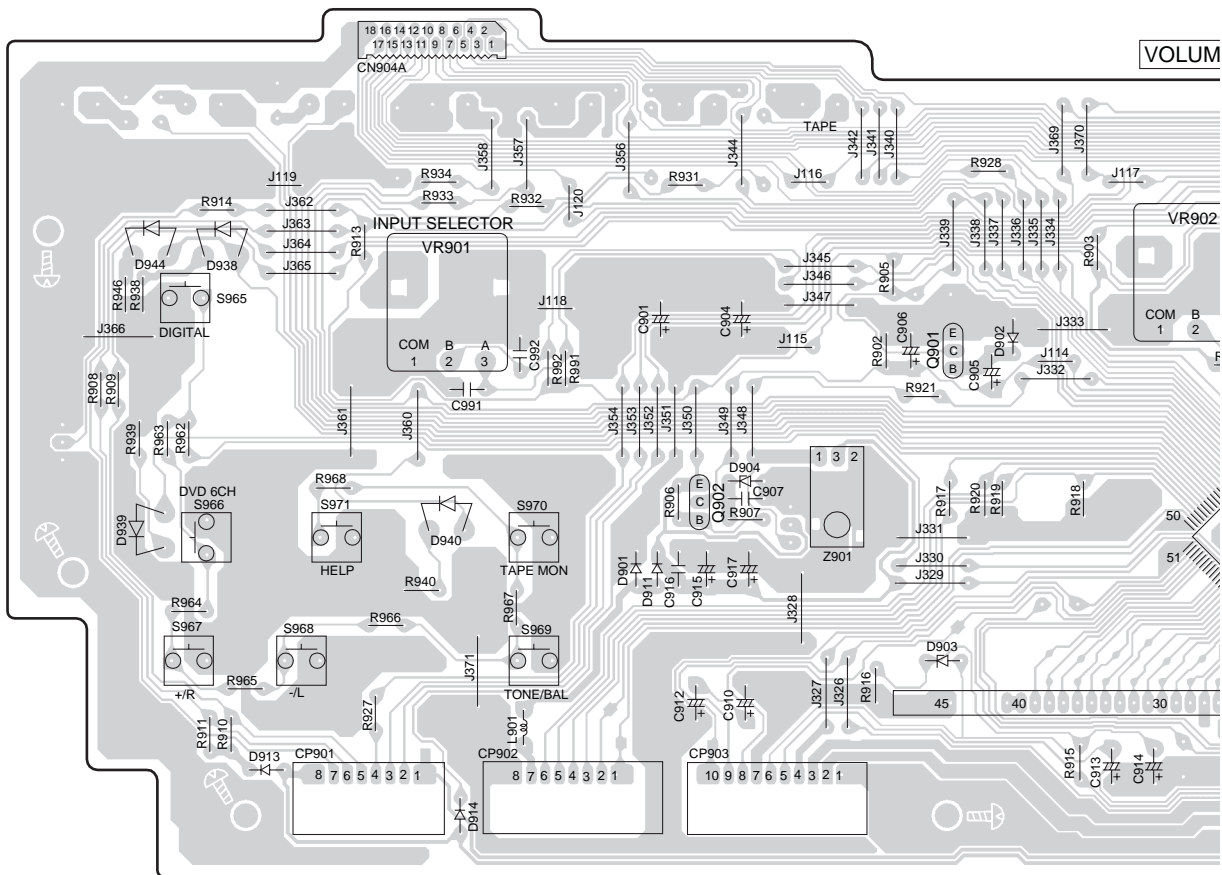

1
2
3
4
5
6
7
8
9

G

H


I

J

K


L

M

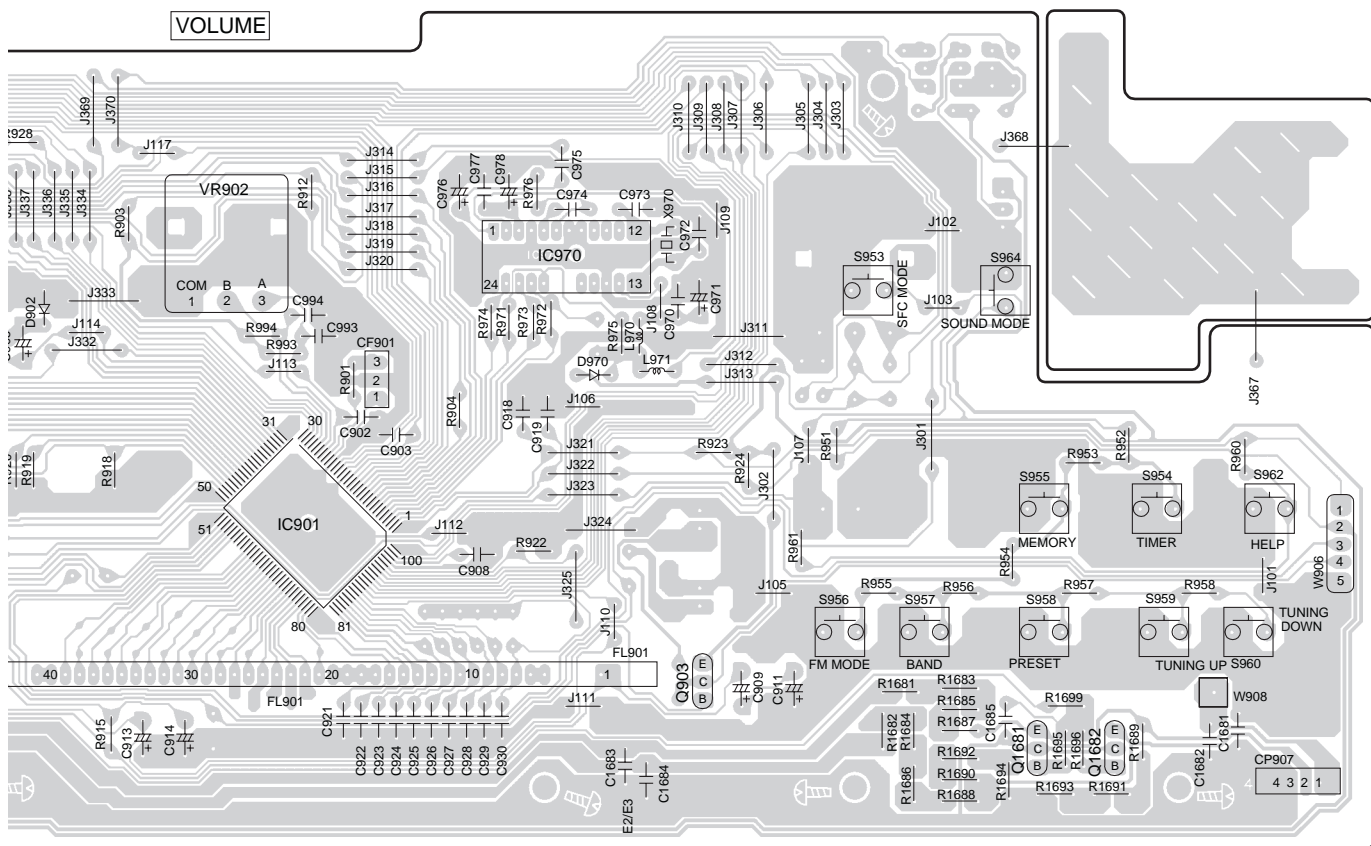

E PHONO EQ P.C.B.
(REP3109C-M...E/EG)
(REP3109D-M...EB)

L TUNER PACK P.C.B.
(RAN0002EM)

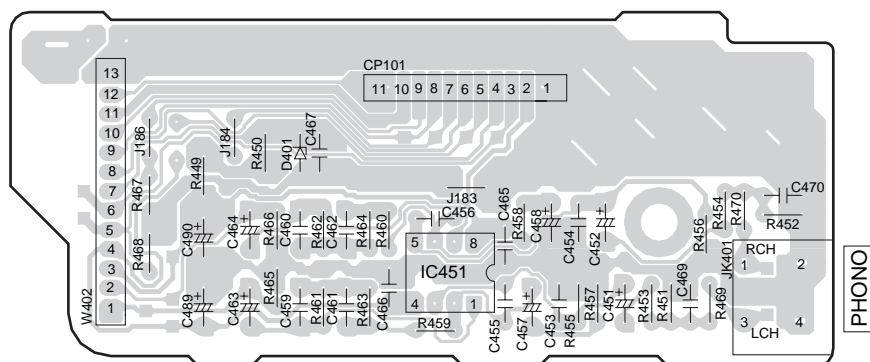

A

B

C

D

E

F

G


1

H SWITCH P.C.B. (REP3104E-S)

2

3

4

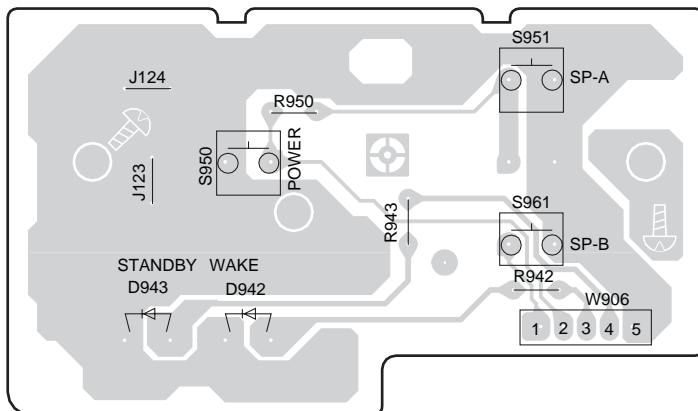


5

J HEADPHONE P.C.B. (REP3104E-S)


6

K FRONT SPEAKER A P.C.B. (REP3104E-S)

7

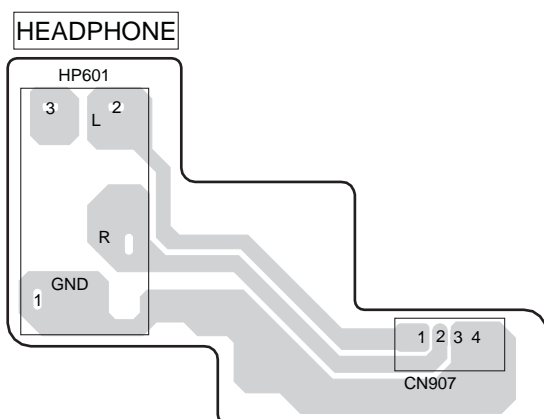

8

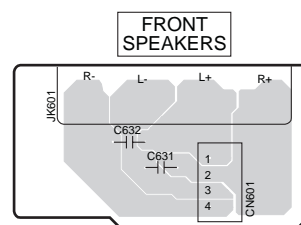


9

A B C D E F G

1
2
3
4
5
6
7
8
9

M SUB-TRANSFORMER P.C.B. (REP3109C-M...E/EG)
(REP3109D-M...EB)

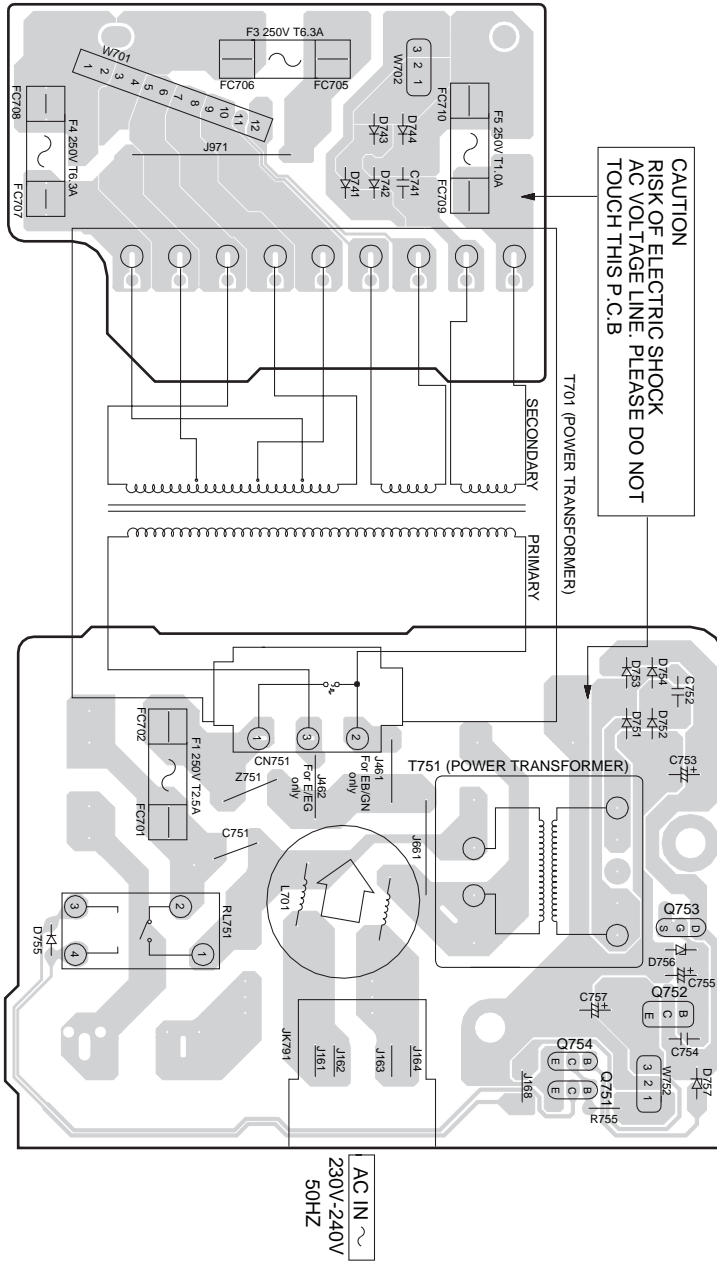

F TRANSFORMER P.C.B. (REP3109C-M...E/EG)
(REP3109D-M...EB)