

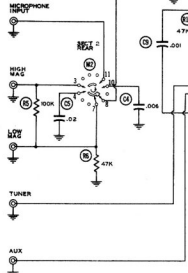


FUNCTION SELECTOR SWITCH SHOWN
IN LP POSITION
SWITCH SEQUENCE:

- 1 - LP
- 2 - TR
- 3 - POP
- 4 - MC
- 5 - TUNER
- 6 - AUX

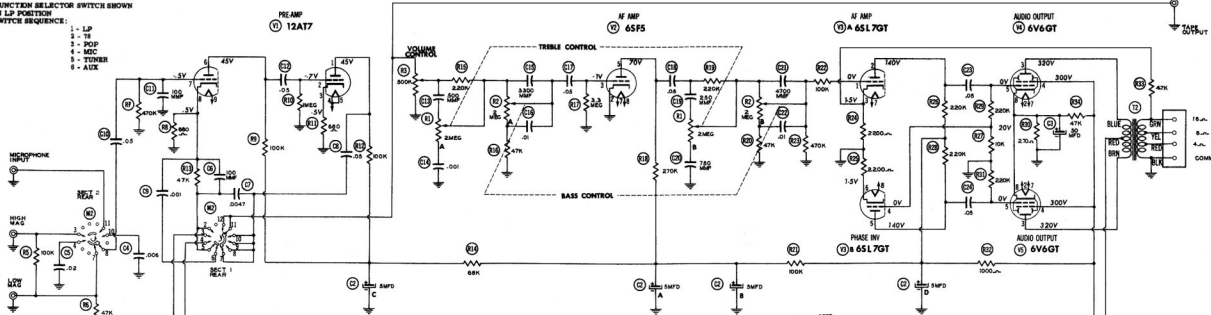

FUNCTION SELECTOR SWITCH
VOLUME CONTROL ON-OFF SWITCH
BASS CONTROL
TREBLE CONTROL

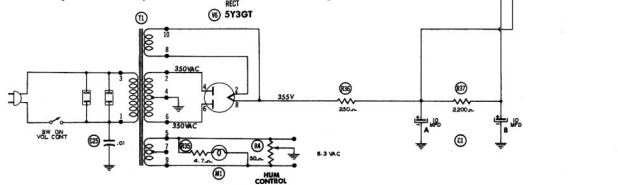

BOGEN DB10A