


- VOLUMES**
- VR11, VR12, VR21, VR22 — DC BALANCE
  - VR30, B — PHONO IMPEDANCE ADJ.
  - VR40, B — BALANCE
  - VR50, B — ATT. PRESET
  - VR60, B — HEADPHONE LEVEL
- OTHERS**
- IC — DML-02
  - G101, G102, G111, G112
  - G131, G145, G146 — 25A836
  - G103, G112, G142, G143 — 25C195
  - G105 — 25A818
  - G113, G114 — 25C1840
  - G121, G122 — 25C1775
  - G164 — 25B925
  - G203, G207 — 25A562
  - G201, G205 — 25B735

- SWITCHES**
- SW 1 a, b, c, d, f
  - SW 2 a, b
  - SW 3 a, b, c, d
  - SW 4 a, b
  - SW 5 a, b, c
  - SW 6 a, b, c, d
  - SW 7 a, b, c, d, e, f
  - SW 8 a, b
  - SW 9 a, b, c, d
  - SW 10
- INPUT SELECTOR**
- (1, AUX-1) 2. TUNER
  - (1, AUX-2) 3. PHONO-4
  - (1, PHONO-2) 4. PHONO-2
  - (1, AUX-2) 5. AUX-2
- DUBBING**
- (1, 1) 2. SOURCE 3 (TAP 2)
  - (1, 1) 2. SOURCE 3 (TAP 1)
- RECORDING OUTPUT**
- (1, 1) 2. OFF
  - (1, 1) 2. ON
- MODE**
- (1, 1) 2. STEREO 3. MONO
- LINEAR EQUALIZER**
- (1, 1) 2. UP/LT 3. FLAT 4. 6.7 (B.S. DOWN/LT)
- FILTER**
- (1, 1) 2. OFF 3. 3.4-Hz
- ATTENUATE**
- (1, 1) 2. OFF 3. SIGNAL OFF
- PHONO INPUT SELECTOR**
- (1, 1) 2. A 3. A+B
- POWER**
- (1, 1) 2. A 3. A+B

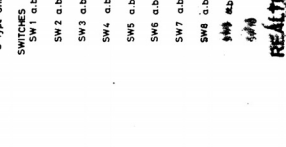

**REAL TIME PROCESSED DC STEREO PREAMPLIFIER C12**