



COMPANY: SAMSON APPLICANT: REVISED NUMBER AND DATE: 1. 2004.11.01 4. 2. 2005.03.09 5. 3. APPROVED DATE: 1. 2. 3. 4. 5. 6. 7. 8. 9.

1 2 3 4 5 6 7 8 9

1/1

SX-1800 & R166, R169 are changed from 0.22ohm/2watts to 0.33ohm/3watts  
 2. R170, R171 are changed from 17kohm/0.25watts to 18kohm/0.25watts  
 3. R172, R173 are changed from 82kohm/0.25watts to 82kohm/0.25watts  
 4. R174, R175 are changed from 82kohm/0.25watts to 82kohm/0.25watts

SX-1200 & R166, R169 are changed from 0.22ohm/2watts to 0.33ohm/3watts  
 2. R178 is changed from 10kohm/0.25watts to 10kohm/0.25watts  
 3. R179, R180 are changed from 17kohm/0.25watts to 18kohm/0.25watts  
 4. R181, R182 are changed from 82kohm/0.25watts to 82kohm/0.25watts

1/1

SX-1200/SX1800

1/1

1/1

1/1

1/1

1/1

1/1

1/1

1/1

1/1

1/1

1/1

1/1

1/1

1/1

1/1

1/1

1/1

1/1

1/1

1/1

1/1

1/1

1/1

1/1

1/1

1/1

1/1

1/1

1/1

1/1

1/1

1/1

1/1

1/1

\* VALUE INFO.

R107	SX1200	33K	SX1800	39K
R109	F101	10A	SX1200	10A
R181	SX1800	33K	SX1200	39K
C203		82K		47K
C204		3300/100		4700/100
R170	PT1	R171	3.3K 1/4W	1.8K 1/4W
R172		R173	68K	82K

AC INPUT

T1	115V	230V
T2	BLU	X
T3	WHT	X
T4	BLK	X
T5	GRY	GRY
T6	RED	RED
T7	BLK	BLU
T8	WHT	WHT

VALUE INFO.

100V	115V	240V
SX1200	10A	6A
SX1800	15A	8A
H1-SX1200-384	H1-SX1200-386	H1-SX1200-392
H1-SX1800-385	H1-SX1800-385	H1-SX1800-384

SERVICE INFORMATION  
 1. ALL VOLTAGES ARE REFERRED TO GROUND UNLESS OTHERWISE NOTED.  
 2. CAPACITANCE VALUES ARE SHOWN IN MICROFARADS UNLESS OTHERWISE NOTED. (P-1000=1000PICO)  
 3. PRECAUTION: ALWAYS DISCONNECT THE UNIT FROM THE POWER SUPPLY BEFORE WORKING ON THE UNIT.  
 4. PRECAUTION: ALWAYS DISCONNECT THE UNIT FROM THE POWER SUPPLY BEFORE WORKING ON THE UNIT.  
 5. PRECAUTION: ALWAYS DISCONNECT THE UNIT FROM THE POWER SUPPLY BEFORE WORKING ON THE UNIT.  
 6. PRECAUTION: ALWAYS DISCONNECT THE UNIT FROM THE POWER SUPPLY BEFORE WORKING ON THE UNIT.  
 7. PRECAUTION: ALWAYS DISCONNECT THE UNIT FROM THE POWER SUPPLY BEFORE WORKING ON THE UNIT.  
 8. PRECAUTION: ALWAYS DISCONNECT THE UNIT FROM THE POWER SUPPLY BEFORE WORKING ON THE UNIT.  
 9. PRECAUTION: ALWAYS DISCONNECT THE UNIT FROM THE POWER SUPPLY BEFORE WORKING ON THE UNIT.