# FENDER "BANDMASTER" LAYOUT

## MODEL 5E7

**NOTICE**
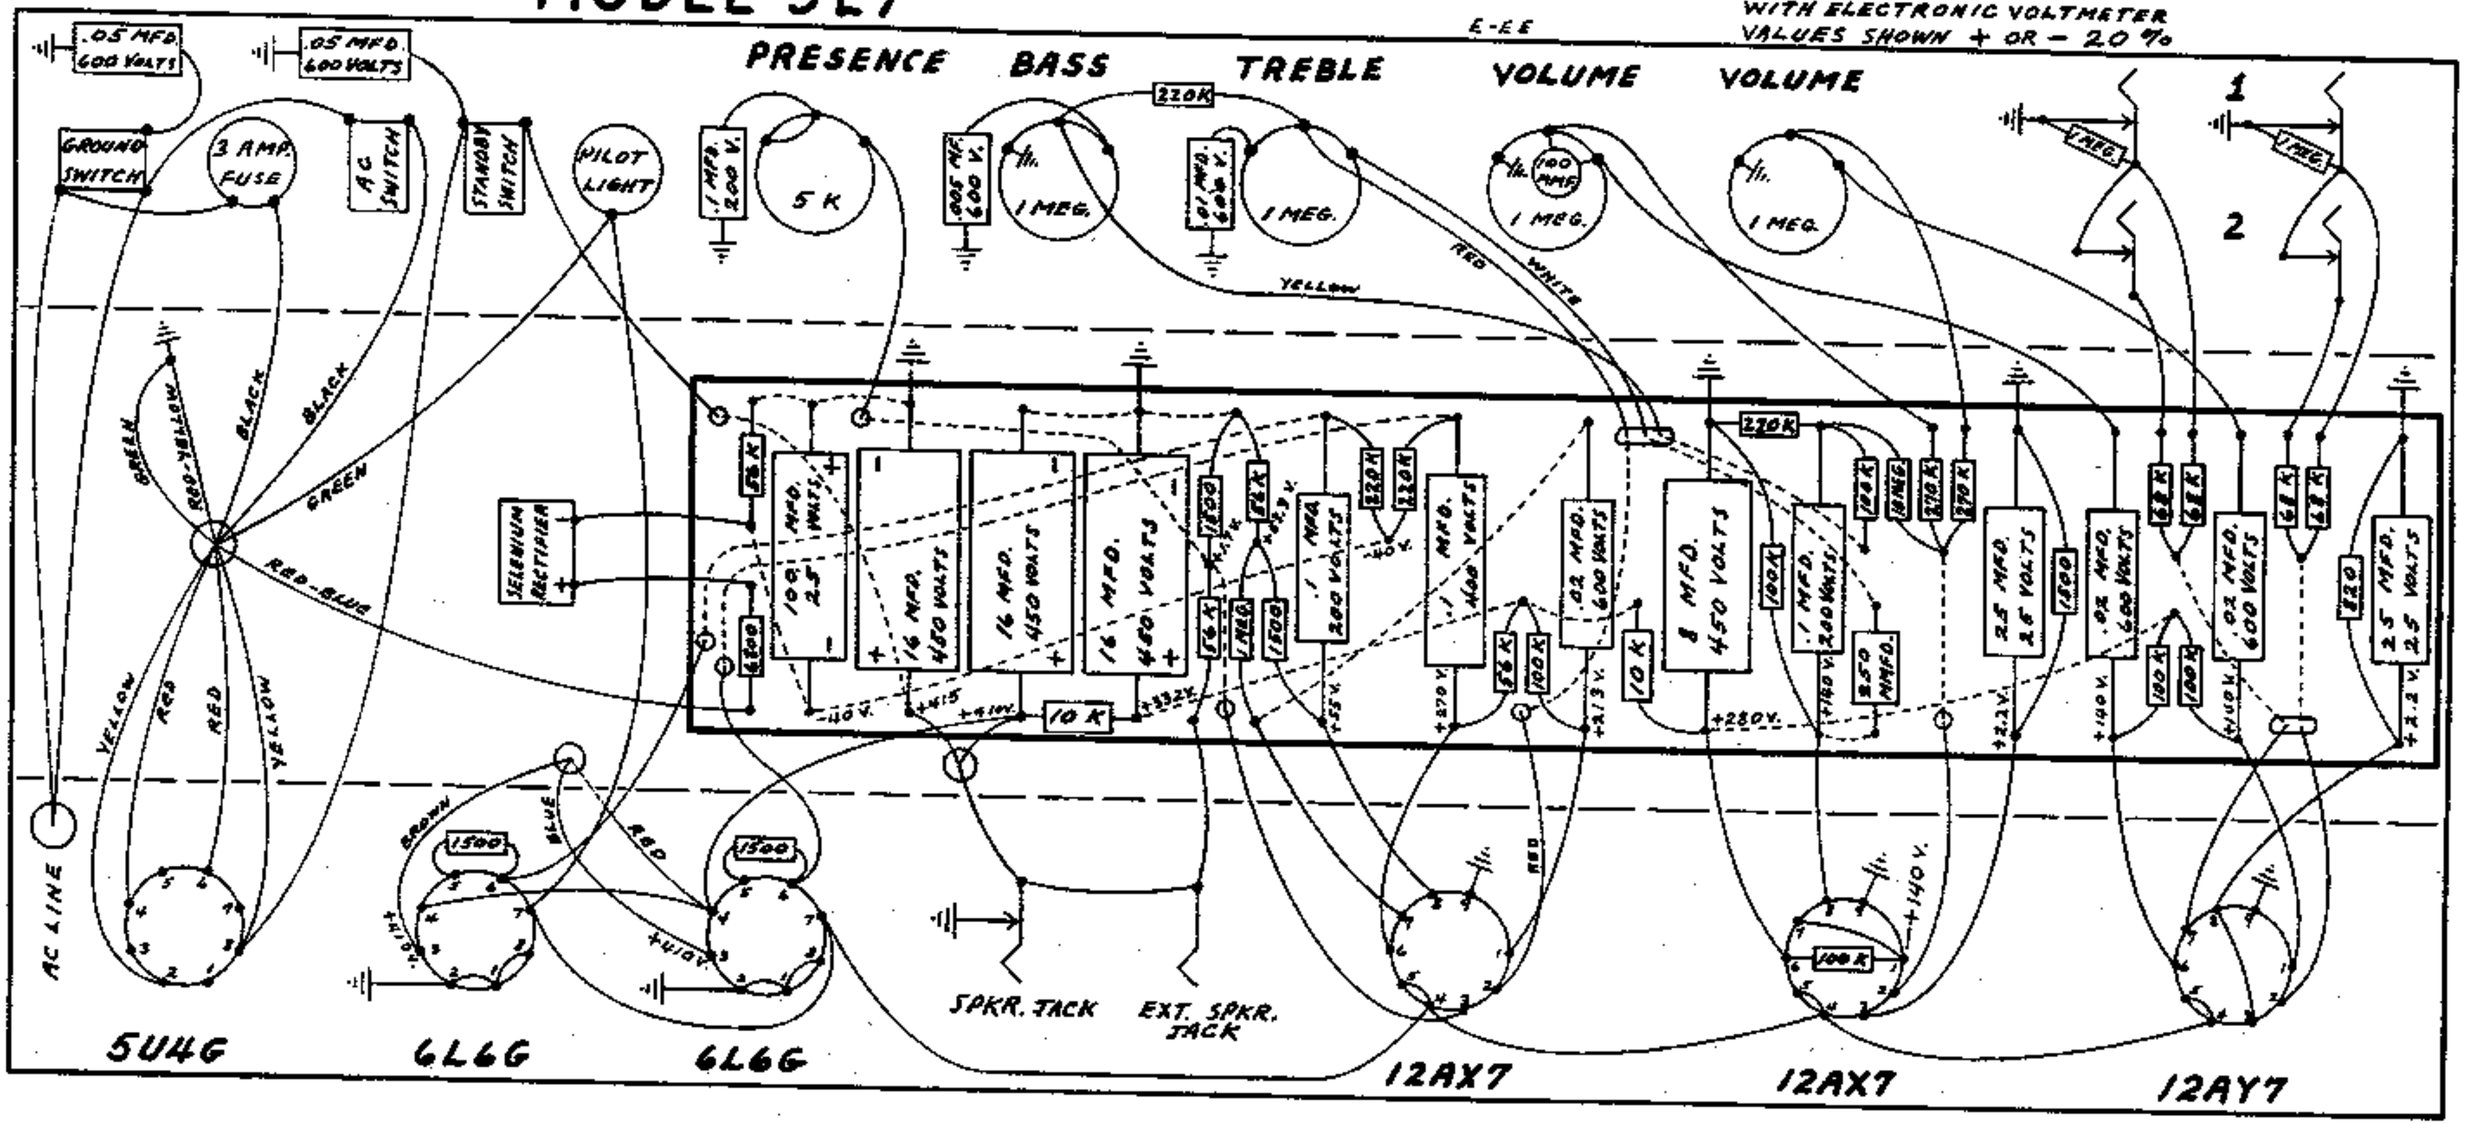
VOLTAGES READ TO GROUND
WITH ELECTRONIC VOLTMETER
VALUES SHOWN + OR − 20 %