SCHEMATIC DIAGRAM

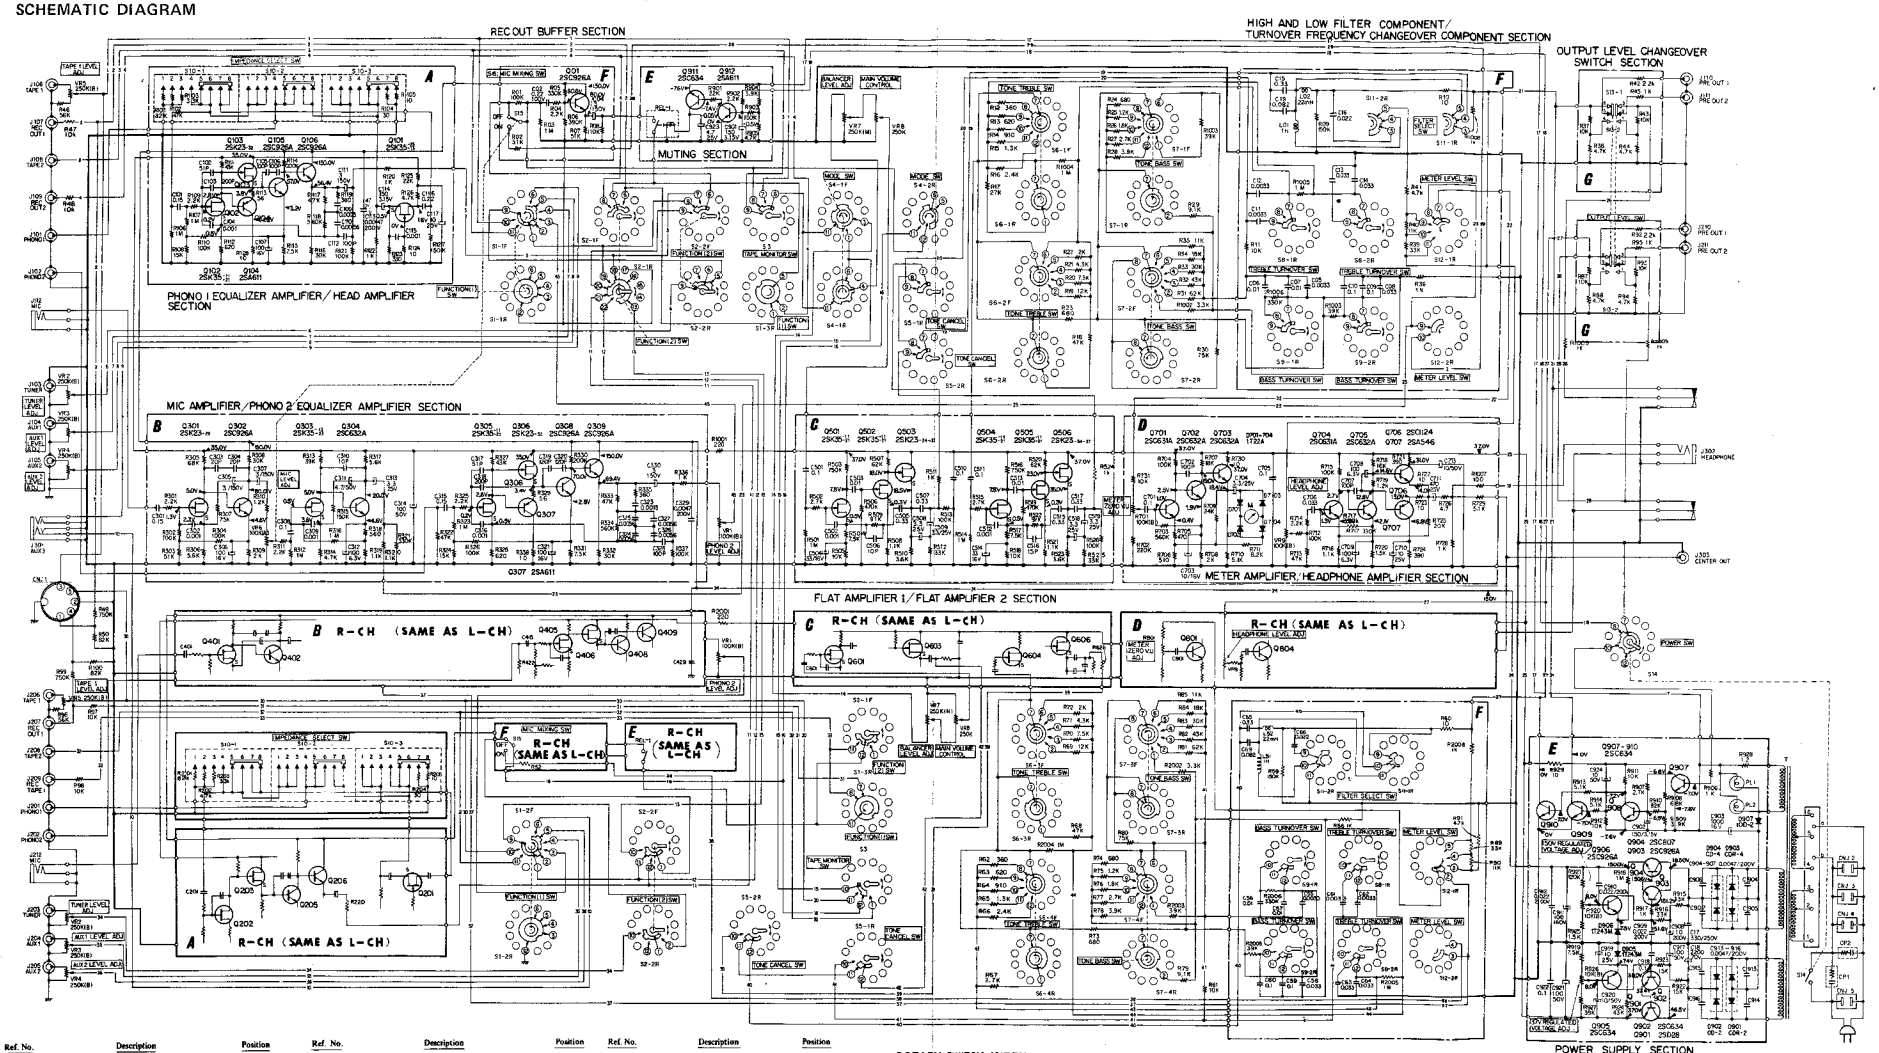

Ref. No.	Description	Position
S1	FUNCTION (1) SW (MIC - PHONO 2 - AUX 1 - AUX 2 - AUX 3 TAPE TO TAPE 1-2, - TAPE TO TAPE 2-1)	MIC
S2	FUNCTION (2) SW (TUNER - FUNCTION (1) - PHONO 1)	FUNCTION (1)
S3	TAPE MONITOR SW (TAPE 2 - SOURCE - TAPE 1)	SOURCE
S4	MODE SW (CHECK "L" - CHECK "R" - REVERSE - STEREO - L+R - LEFT - RIGHT)	REVERSE
S5	TONE CANCEL SW (TONE ON - CANCEL)	TONE ON

Ref. No.	Description	Position
S6	TONE TREBLE SW	-10 dB
S7	TONE BASS SW	-10 dB
S8	TREBLE TURNOVER SW (2.5 kHz - 5 kHz)	2.5 kHz
S9	BASS TURNOVER SW (500 Hz - 250 Hz)	500 Hz
S10	IMPEDANCE SELECTOR SW	10Ω
S11	FILTER SW (LOW (50 Hz) - OFF - HIGH (9 kHz) - BOTH)	LOW (50 Hz)

Ref. No.	Description	Position
S12	METER LEVEL SW (MIC - 0 dB - (-10 dB) - (-20 dB))	MIC
S13	OUTPUT LEVEL SW (1 V - 0.3 V)	1 V
S14	POWER SW (ON - OFF)	OFF
S15	MIC MIXING SW (ON - OFF)	OFF

ROTARY SWITCH INDEX



LEVER SWITCH INDEX



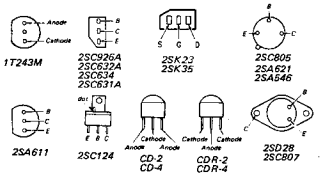

Note:
All resistance values are in ohms.
k = 1,000, M = 1,000 k
All capacitance values are in μF except as indicated with p, which means μμF.
All voltages represent an average value and should hold within ±20%.
All voltages are dc measured with a VOM which has an input impedance of 20 k ohms/volt. No signal in.

SONY
TA-2000F
© 1971