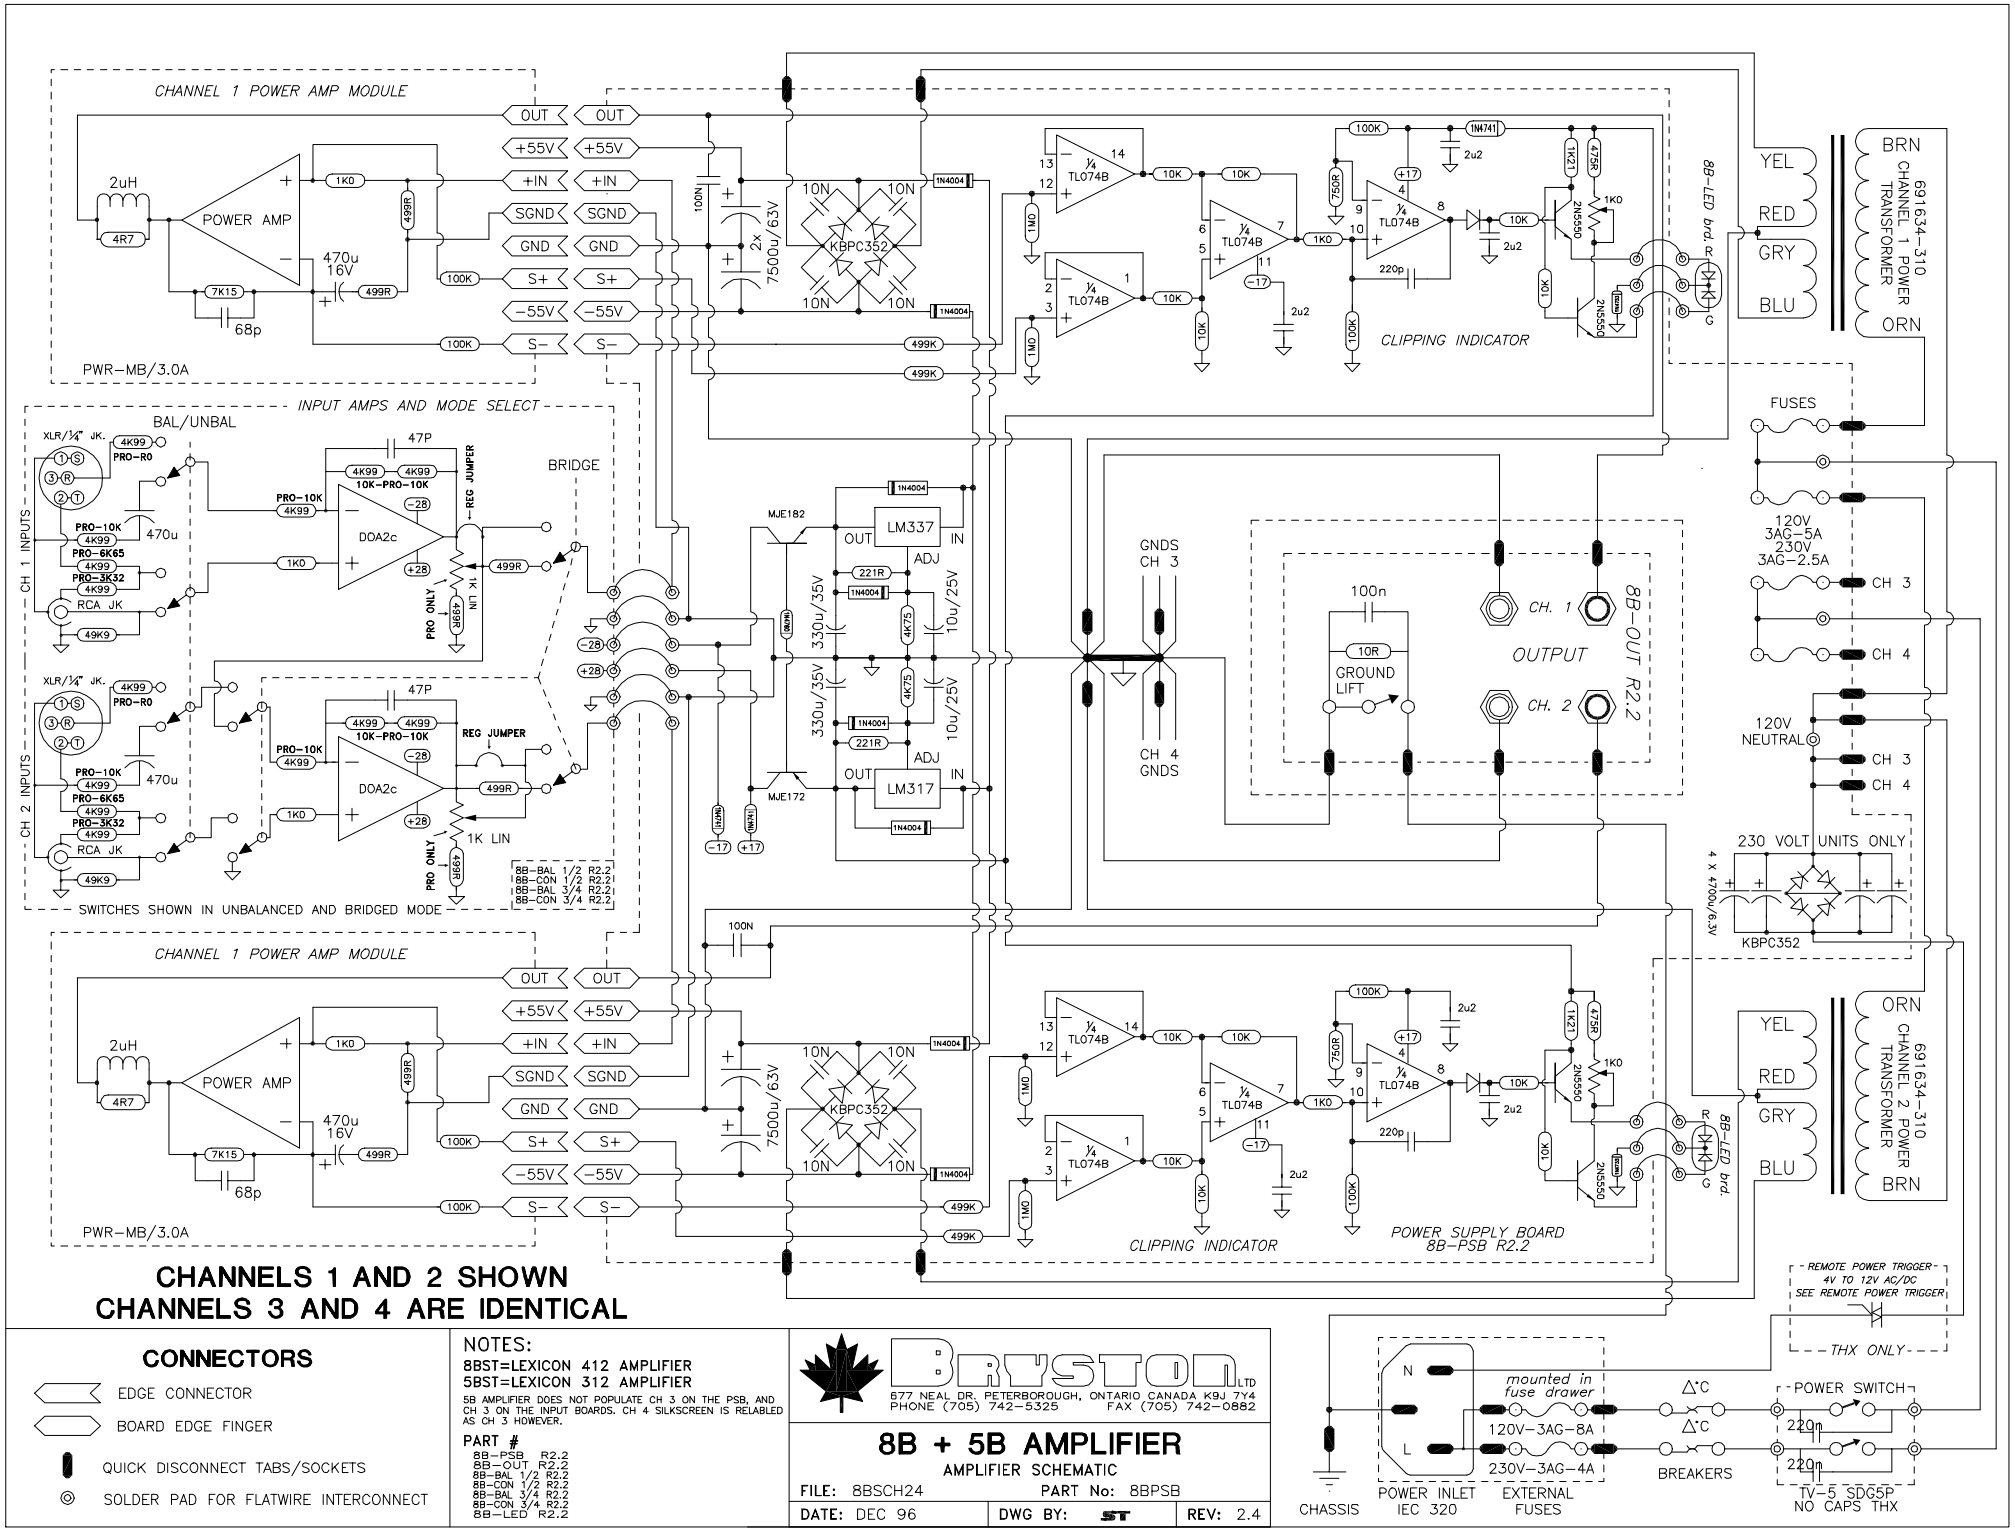

CHANNELS 1 AND 2 SHOWN
CHANNELS 3 AND 4 ARE IDENTICAL

CONNECTORS

- EDGE CONNECTOR
- BOARD EDGE FINGER
- QUICK DISCONNECT TABS/SOCKETS
- SOLDER PAD FOR FLATWIRE INTERCONNECT

NOTES:

8BST=LEXICON 412 AMPLIFIER
5BST=LEXICON 312 AMPLIFIER

5B AMPLIFIER DOES NOT POPULATE CH 3 ON THE PSB, AND CH 3 ON THE INPUT BOARDS. CH 4 SILKSCREEN IS RELABLED AS CH 3 HOWEVER.

PART #

8B-PSB R2.2
8B-OUT R2.2
8B-BAL 1/2 R2.2
8B-CON 1/2 R2.2
8B-BAL 3/4 R2.2
8B-CON 3/4 R2.2
8B-LED R2.2

BRYSTON LTD
677 NEAL DR, PETERBOROUGH, ONTARIO CANADA K9J 7Y4
PHONE (705) 742-5325 FAX (705) 742-0882

8B + 5B AMPLIFIER

AMPLIFIER SCHEMATIC

FILE: 8BSCH24 PART No: 8BPSB

DATE: DEC 96 DWG BY: ST REV: 2.4