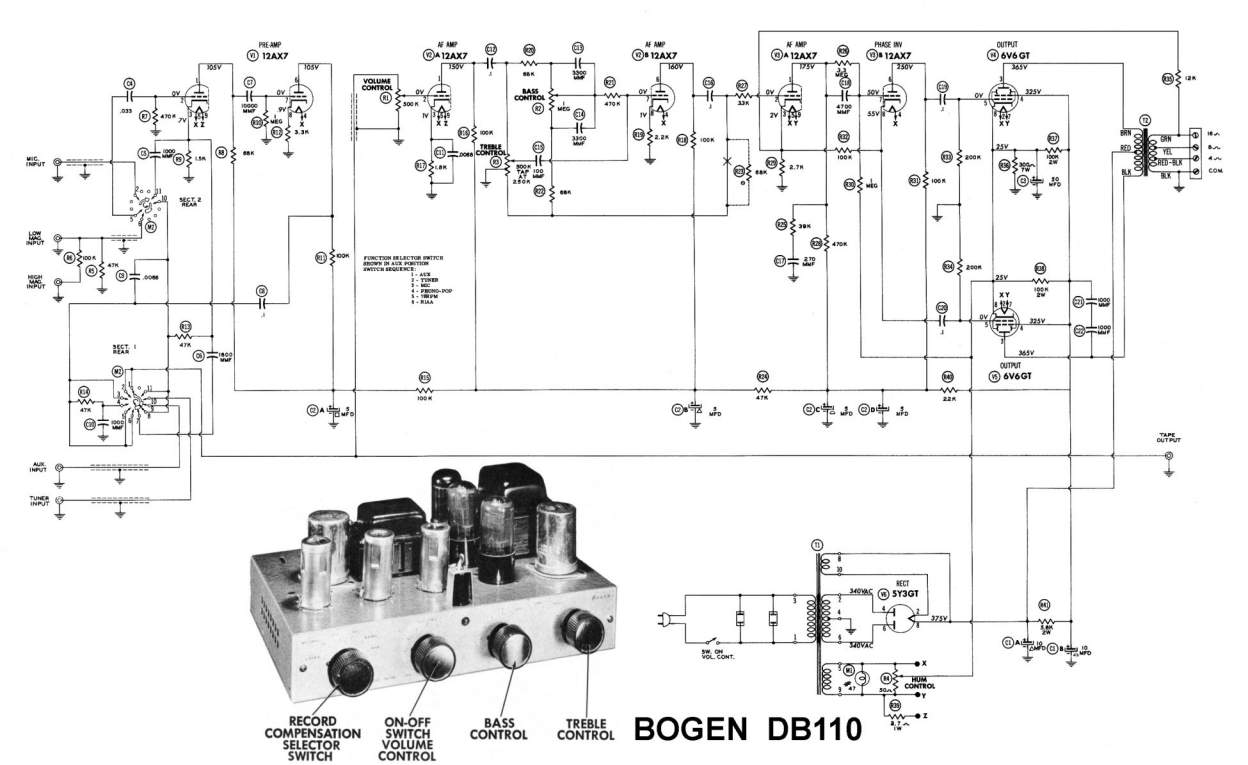
PRE-AMP
V1 12AX7
AF AMP
V2 12AX7
AF AMP
V3 12AX7
AF AMP
V4 12AX7
PHASE INV
V5 12AX7
OUTPUT
V6 6V6-GT
OUTPUT
V7 6V6GT
VOLUME CONTROL
BASS CONTROL
TREBLE CONTROL
MIC INPUT
LOW MAG INPUT
HIGH MAG INPUT
AUX INPUT
TUNER INPUT
TAPE OUTPUT
SECT. 1 REAR
SECT. 2 REAR
FUNCTION SELECTOR SWITCH SHOWN IN AUX POSITION
SWITCH SEQUENCE:
1 - AUX
2 - TUNER
3 - MIC
4 - PHONO-POP
5 - TIBFM
6 - RIAA
RECT
5Y3GT
SW. ON VOL. CONT.
HUM CONTROL
RECORD COMPENSATION SELECTOR SWITCH
ON-OFF SWITCH VOLUME CONTROL
BASS CONTROL
TREBLE CONTROL

BOGEN DB110